


Installation Instructions Rigid 30-55 & Solide Click 30-55

Engaging 3L TripleLock and Click4U using a rubber mallet

ONE
FLOR
EUROPE

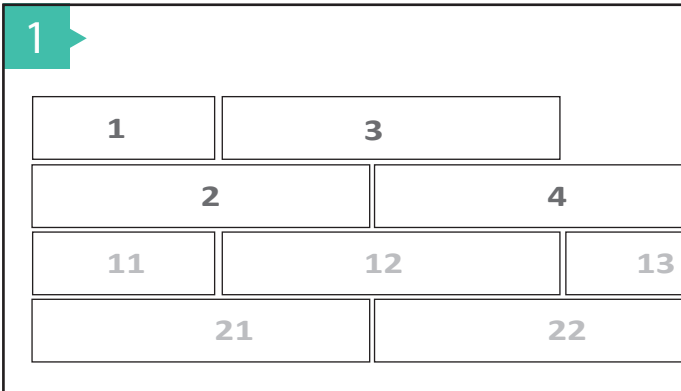

ESTABLISH STAGGER AND ALIGN TOOLS

Products should be staggered in bricklaid pattern, stagger equal to half of a plank. Tools needed: planks, spacers, rubber mallet.



INSTALL 1ST PLANK

It is very important that the first row is installed straightly. To realize this, installation alternates back and forth between rows one and two, for the first two rows only. Start with a small plank (1) and position this plank close to the wall.




INSTALL 2ND PLANK

Now select a long plank (2). Using the **Click4U** angle system, angle the long side of plank 2 on to the long side of plank 1. Drop plank 2 to lock. Make sure there are no gaps.



ENGAGE 3RD PLANK ON LONG SIDE

Take another long plank (3). Repeating the previous step, insert the long side of plank 3 into the long side of plank 2. Then slide plank 3 to your left until the short side is in contact with the short side of plank 1.

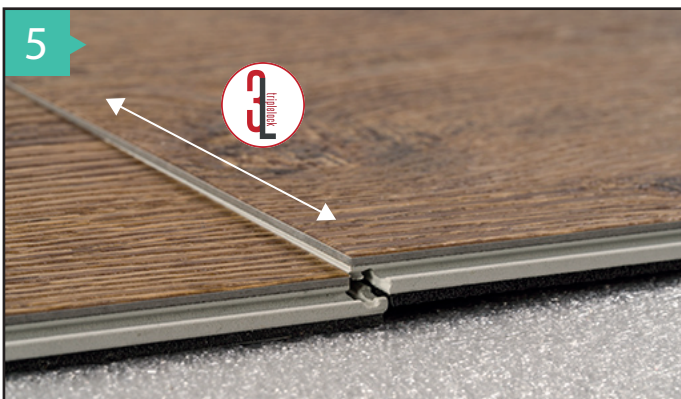

ENGAGE 3RD PLANK ON SHORT SIDE (Part I)

Using the **3L TripleLock** one piece drop-lock system, drop the short side of plank 3 onto the short side of plank 1.



ENGAGE 3RD PLANK ON SHORT SIDE (Part II)

Using a rubber mallet slightly tap the joints on the short side to secure. This ensures 3x locking.

Installation Instructions Rigid 30-55 & Solide Click 30-55

Engaging 3L TripleLock and Click4U using a rubber mallet

ONE
FLOR
EUROPE



7 FINISH ROWS 1 AND 2

Continue alternating planks on rows 1 and 2 to avoid misalignment. From row 3 onwards, installation does not require alternating rows. Install one row after the other by starting with angling on the long side, sliding until the short sides are in contact and then locking the short side.



8 SECURING PLANKS

As you go, don't forget to use a rubber mallet on the short sides to secure the locking.



9 FINALIZE FLOOR

Finished? Remove spacers and cover gaps with a trim.



10 DISASSEMBLING THE LONG SIDE

Lift up the entire row in the same angle as you did during installation, then slide the rows apart.



11 DISASSEMBLING THE SHORT SIDE

Disassemble the row by sliding apart the planks on the short side.